



## How to disconnect the gas column from the base

1. With the assistance of another person, hold the base upside down as shown below
2. It should be held at approximately 20cm off the ground

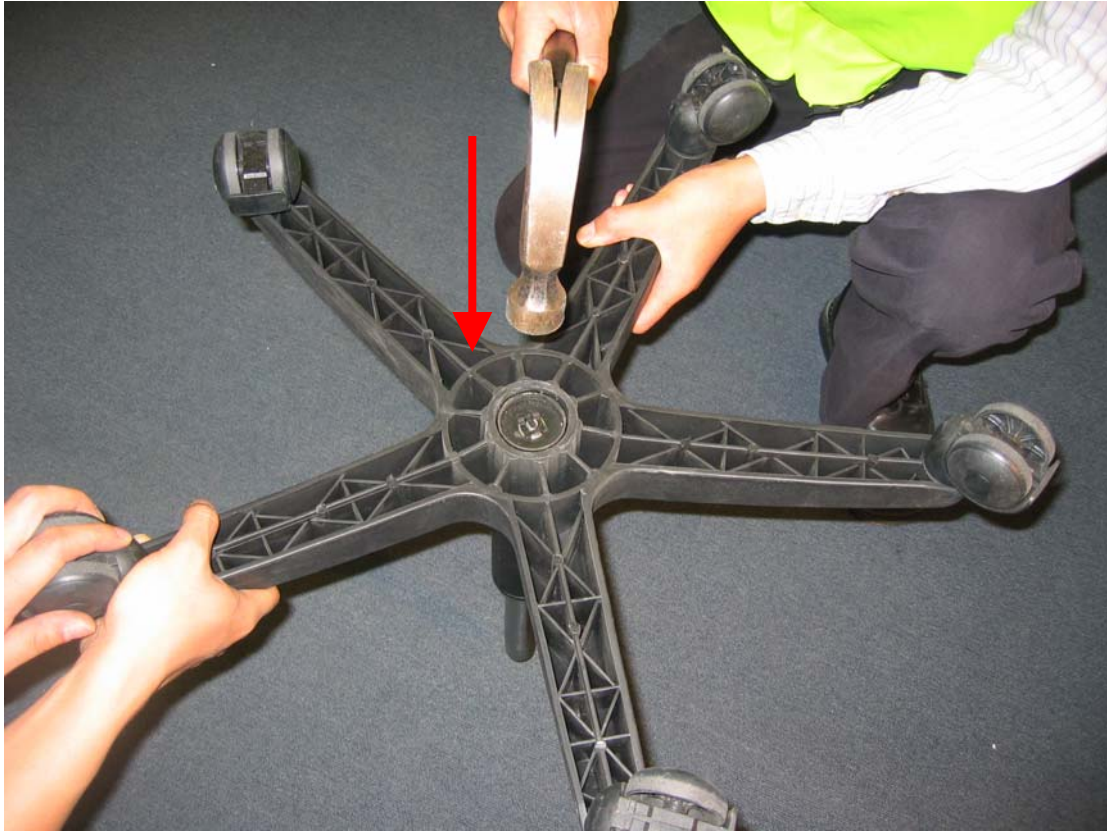

2. Using a hammer, hit the centre of the base

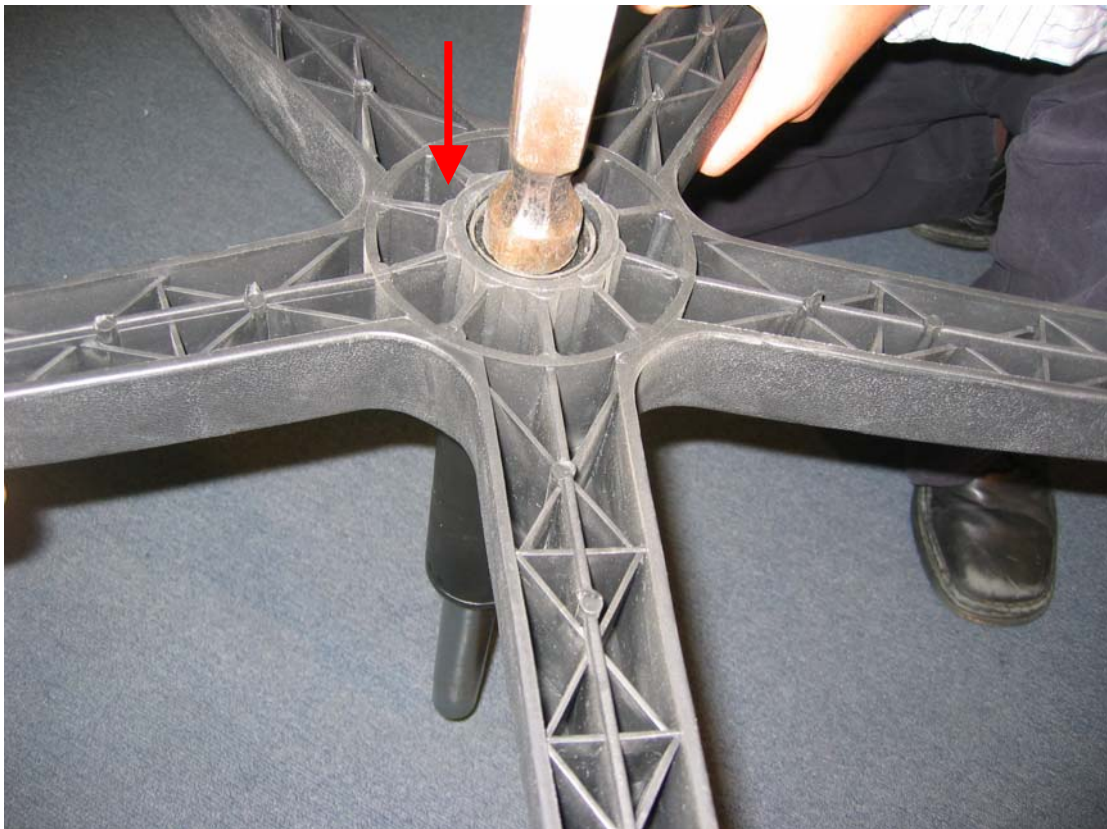

3. The gas column will disconnect from the base as shown below

